# blive

# FIBER CONCRETE PLANTERS (GFRC)

PLANTERS	Reference	Model	Measure	Weight	Quantity per pallet
	500024	BALKO 80	80 x 25 x 25	19 kg	24 unit.
	500025	BALKO 100	100 x 25 x 25	22 kg	24 unit.
	500022	KUBE 45	45 x 45 x 45	22 kg	16 unit.
	500023	KUBE 60	60 x 60 x 60	62 kg	12 unit.
	500026	RETKUBE 99	99 x 40 x 45	62 kg	12 unit.
	500027	RETKUBE 120	120 x 40 x 45	70 kg	12 unit.
	500039	SKUARE 100	100 x 25 x 60	57 Kg	12 unit.
	500073	TERRACE 100	100 x 29 x 80	95 Kg	8 unit.



500073	TERRACE 100	100 x 29 x 80	95 Kg	8 unit.
500074	SILL 58	58x55	46 Kg	12 unit.















500075	CONIK 40/40	40/30x40H	21 kg	20 unit.
500076	CONIK 50/50	50/37,5x50H	32 kg	20 unit.
500077	CONIK 70/50	50/32,5x70H	40kg	16 unid.
500078	CONIK 60/60	60/45x60H	48kg	12 unit.
500079	CONIK 90/70	70,5/47,5x90H	115kg	on consultation
500080	CONIK 90/83	83/60х90Н 145kg		on consultation
500081	CONIK 110/100	100/73x110H	408kg	on consultation

	500082	CONIK 100/125	125/100x100H	530kg	on consultation
--	--------	---------------	--------------	-------	--------------------

## **INFORMATION:**

- Made of fiber-reinforced concrete water-repellent;
- Resistant to freeze/thaw cycles and UV rays;
- Natural appearance;
- With drainage holes (warning if not desired);
- Thickness: 14-16mm (except for CONIK planters thickness can vary from 25mm to 60mm);
- Colors: white, grey, black;

### **RECOMMENDATIONS and INSTRUCTIONS FOR USE:**

#### Installation of planters:

The location of the planters should be on a **level and stable surface**. \*If you want to put feet in the planters, they should be of the same height. If the planting is heavy, it is also recommended to place the feet in the center of the planter so that the weight is uniform. It's recommended that a water repellent be applied to the inside of the planter.

#### The plantation:

Fill the pots with light soil, compacting slightly.

Choose a type of soil that facilitates water absorption and does not clog drainage holes. Water drainage is critical and it's important to water in **moderation**. The type of plant chosen must correspond to the capacity of the planter for the future (during its growth); It must not exceed the weight of the planter or cause compression.

#### Maintenance:

It's strictly forbidden to use flammable or toxic liquids in the planters, as this may damage the color of the concrete or the concrete itself. Sitting on planters or using force (e.g. kicking, etc.) is also prohibited. It's recommended to use only clean water to wash the pots.

#### Warranty:

\* After the material is unloaded, it becomes the full responsibility of the customer. If the product is delivered by a transport agency, the customer must check the pallet before signing the delivery note. Without notification, we will not accept to take delivery of the product if it is damaged during transport. If the carrier cannot wait to check the material, <u>note on the packing slip that the pallet needs to be checked</u>.

\* We don't accept claims regarding the maintenance of our products; after purchase, their correct use is the customer's responsibility.

\* Please note that the color of concrete may have some oscillations. This phenomenon is due to the natural concrete.

\* In the case of a validated claim, only the value of the planter (not including the value of the plant, soil and labor) will be reimbursed.